

Installing unsigned drivers under Windows8 64bit


In order to force the installation of unsigned (not Microsoft certified) drivers under Windows8/64 this must be enabled before the start-up of the Windows system with "cmd shutdown /r /o". Windows now executes a restart.

This concerns the E-LAB AVRprog USB driver and also the AVRco USB driver.


Step 1:

If Windows 8 has started then the Boot-Options-Menu must be started. To do this, on the Windows 8 desktop the button combination of **Win+R** must be pressed to open the "Execute"-dialog. In this dialog the following command must be typed in to start the "Options"-menu at boot time:


Step 2: In the „Options“-menu click onto "Troubleshoot".

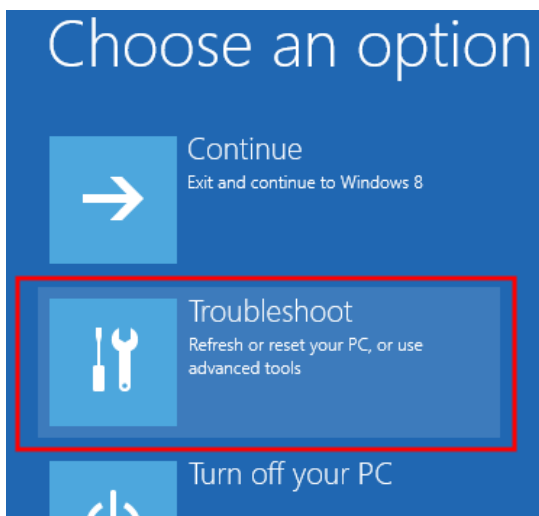


Step3: click onto "advanced options".

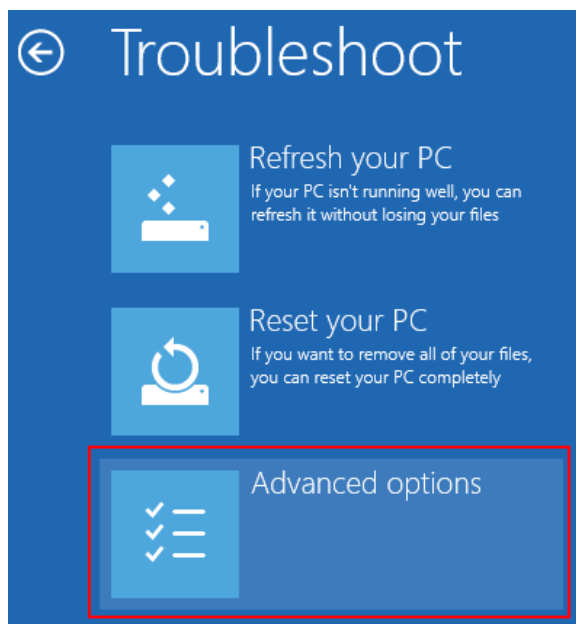


Step4: click onto "Startup Settings".

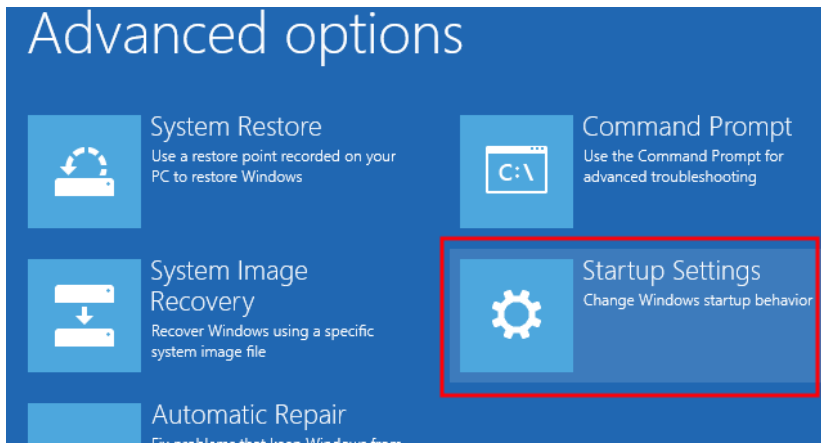

Step5: click onto "Restart".

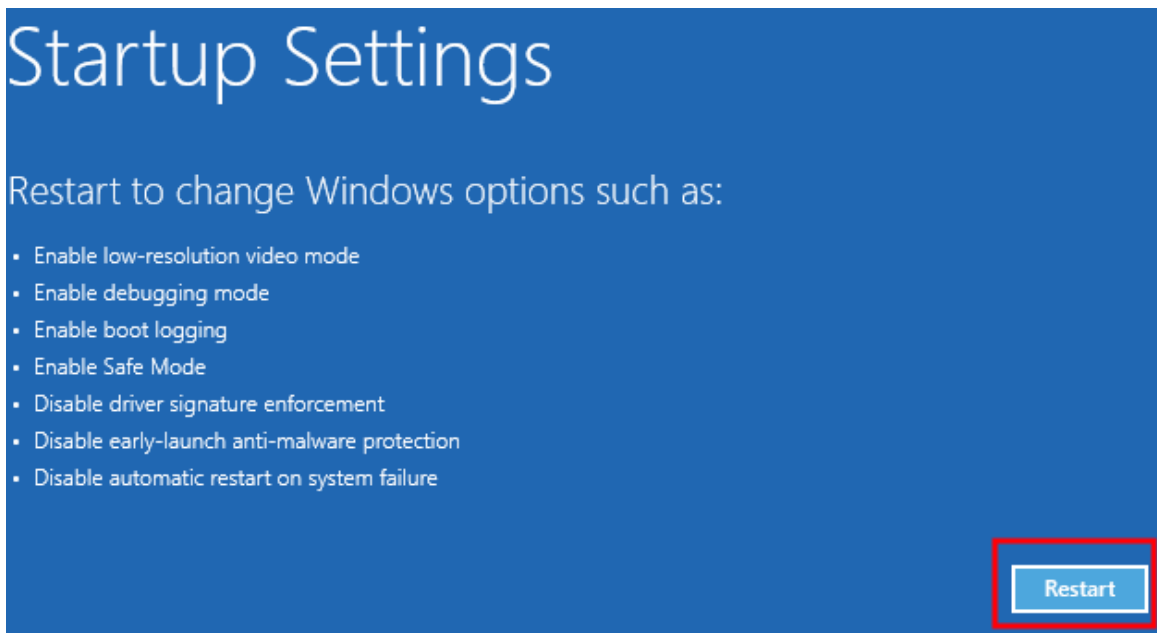

Step6: Choose the **Disable Driver Signature Enforcement** and hit the Enter key to start Windows

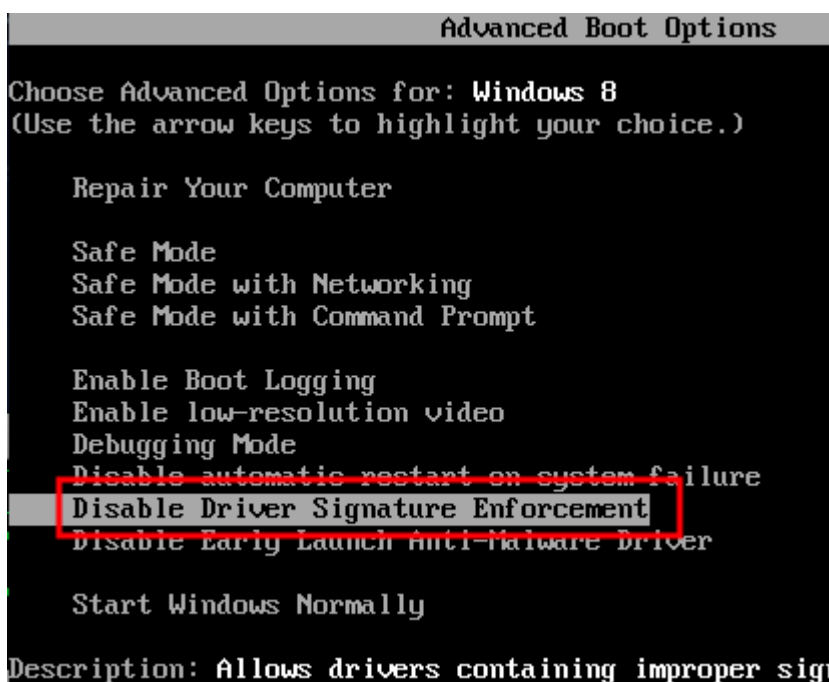

Now the AVRco or AVRprog driver can be installed without any error message.